

13. Menu Navigation Structure



1. Setting Limits



1.1. Setup wizard



2. Safety

2.1. Collision Force

- Opening Collision Force
- Closing Collision Force
- MTR S Opening Collision Force
- MTR S Closing Collision Force

2.2. Collision Count

2.3. Alarm Output

2.4. LCK Input as ESTOP

2.5. External gate indication

- Indicator Output
- Closed Indication
- Part Close Indication
- Closing indication
- Part Open Indication
- Opening Indication
- Open Indication
- Pedestrian Indication
- Unknown Indication



3. Autoclose

3.1. Autoclose Status

3.2. Autoclose Timer

3.3. Autoclose Override

3.4. Autoclose Advanced Options

- Autoclose Fully Open
- Autoclose Partly Open
- Autoclose Partly Closed



4. Modes of Operation

4.1. Operating Mode

- Standard Mode
- Condominium Mode
- Reversing Mode
- PLC
- Deadman Control Mode



5. Run Profile

5.1. Positive Close Mode

- Positive Close Mode Status
- Positive Close Mode Force

5.2. Pre-open Delay

5.3. Pre-close Delay

5.4. Opening Speed

5.5. Closing Speed

5.6. Ramp-Up Distance

5.7. Ramp-Down Distance

5.8. TRG Stop Distance

5.9. IRB Stop Distance

5.10. Crawl Distance



6. Infrared Beams

6.1. PIRAC Control

- PIRAC Status
- Stop on Open
 - Stop on Open Status
 - Stopping Distance

6.2. IR Beam Test

- Status

6.3. IRBO=IRBC on Closing

- Test Beam

6.4. IR Beam Alarms

- Ambush Alarm
- Break-in Alarm
- Alarm Output



7. Pedestrian

7.1. Pedestrian Open Position

7.2. Pedestrian Autoclose Time

7.3. Pedestrian pre-open Delay

7.4. Pedestrian pre-close Delay



8. Courtesy Light

8.1. Courtesy Light Timer

8.2. Courtesy Light Profile

- Courtesy Light
- Pre-flash A
- Pre-flash B
- Pre-flash C



9. ChronoGuard

9.1. Time and Date

9.2. Time-Periods

- Add Time-Period
- Delete Time-Period
- Edit review Time-Periods
- Auto Function
- Time-Bar

9.3. Exclusions

- Add Exclusion
- Delete Exclusion
- Edit Review
- Auto Function
- Time-Bar Function

9.4. Delete all Time-Periods and Exclusions



10. General settings

10.1. Operating Standard

10.2. Reset Options

- Factory Defaults
- Delete all Remotes
- Delete all Time-Periods and Exclusions
- Reset All

10.3. Diagnostic Screen Status

10.4. Test Button Disabled Status

10.5. Backup EEPROM

10.6. Restore EEPROM

CONTINUED OVERLEAF



11. Remote Controls



**Press button of valid remote control
(if menu locked)**

11.1.Add Remotes

11.2.Delete Remotes

- Delete Remote by ID
- Delete Remote Button
- Delete Remote by Button
- Delete not Present
- Delete all Remotes

11.3.Edit Remote Button

11.4.Autolearn

11.5.Lock Tx Menu

11.6.Onboard Receiver Enable/
Disable